

PO8 MAUSER / LUGER

1. Front Sight
2. Barrel
- 3.
4. Ejector
5. Receiver Axle
6. Trigger Bar Spring
7. Trigger Bar
8. Trigger Bar Plunger Pin
- 9.
10. Trigger Bar Plunger
11. Coupling Link
12. Coupling Link Pin
13. Toggle Link, Rear
14. Toggle Axle
15. Toggle Axle Pin
16. Toggle Link, Forward
17. Breech Block
18. Breech Block Pin
19. Extractor Pin
20. Extractor Spring
21. Extractor
22. Firing Pin
23. Firing Pin Spring
24. Firing Pin Spring Guide
- 25.
26. Hold Open Latch
27. Hold Open Latch Spring
28. Magazine Catch
29. Recoil Lever
30. Recoil Lever Pin
31. Mainspring
32. Mainspring Guide
33. Locking Bolt
35. Trigger Plate (sideplate)
36. Trigger Lever Pin
37. Trigger Lever
38. Trigger
39. Trigger Spring
40. Magazine Catch Spring
41. Safety Bar
42. Safety Catch
43. Safety Pin
44. Grips
45. Grip Screw
46. Magazine
- 47.
- 48.
- 49.
50. Mainspring

